


**Morris Minor 1000
Lubrication Chart**

- 1 Every 3,000 miles (5000 Km.)
or more often in very dusty conditions
clean and re-oil air cleaner. *IF FITTED*
- 2 Every 6,000 miles (10000 Km.)
Renew external oil filter element for engine.
- 3 Every 3,000 miles (5000 Km.)
Add a few drops of oil to dynamo
bearing through hole in commutator end
bearing housing.
- 4 Every 3,000 miles (5000 Km.)
Withdraw distributor rotating arm and add
a few drops of thin oil to opening
and to advance mechanism through gap
round cam spindle.
- 5 Every 6,000 miles (10000 Km.)
Remove each front wheel hub disc and
prize off grease retaining cap from end of
hub. Fill cap with grease and
replace securely.
- 6 12 Every 1,000 miles (1600 Km.)
13 15 Give 3 or 4 strokes of grease gun filled
with grease
- 7 Every 6,000 miles (10000 Km.)
Thoroughly clean hydraulic dampers and
examine fluid level. Replenish if necessary
with correct fluid.
- 8 Every 1,000 miles (1600 Km.)
Inspect fluid level in brake master cylinder
supply chamber and replenish with
Lockheed Genuine Brake Fluid.
- 9 Every 1,000 miles (1600 Km.)
Inspect oil level in gearbox
replenish if necessary ENGINE OIL ONLY

After first 500 miles (800 Km.)
and subsequently
every 6,000 miles (10000 Km.)
drain off old oil and refill with fresh oil
- 10 Every 1,000 miles (1600 Km.)
Inspect oil level in axle through filler and
replenish if necessary with recommended
hypoid oil

After first 500 miles (800 Km.)
and subsequently
every 6,000 miles (10000 Km.)
drain off old oil and refill with fresh oil
- 11 Every 6,000 miles (10000 Km.)
Remove rear hydraulic dampers, carefully
clean exterior and then inspect fluid level.
Replenish with correct fluid if necessary.
- 14 Every 12,000 miles (20000 Km.)
Apply oil gun to nipple on steering gearbox
and give up to 10 strokes, but no more.
Use hypoid oil / EP 80/90 NOT GREASE
- 16 Every 250 miles (400 Km.)
Inspect oil level in engine by dipstick and
replenish if necessary

After first 500 miles (800 Km.)
and subsequently
every 3,000 miles (5000 Km.)
drain off old oil and refill
- 17 Every 1,000 miles (1600 Km.)
Remove ~~cap~~ cap from top of carburettor
suction chamber and add a teaspoonful of
engine oil

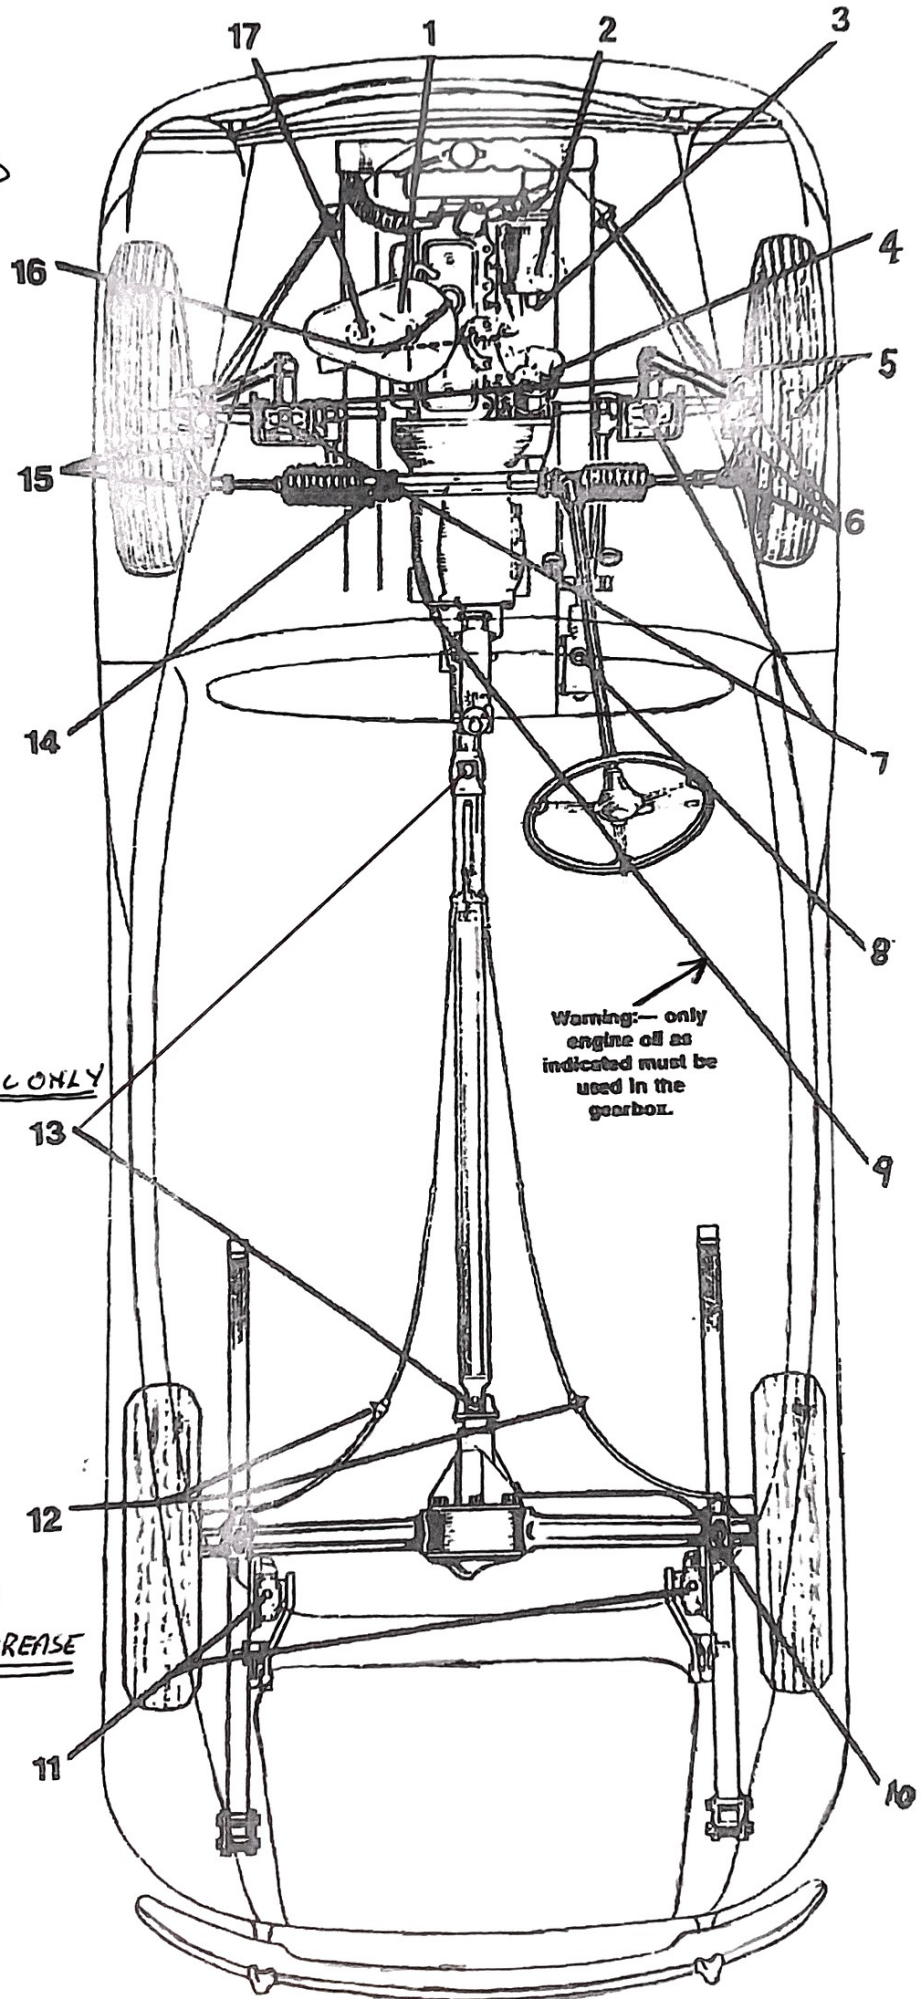

Warning— only
engine oil as
indicated must be
used in the
gearbox.